Drip Coffee Maker

User Manual

SY-DC02

WELCOME

Thank you for purchasing the new Drip Coffee Maker SY-DC02. In order to fully benefit from this product, please read these instructions carefully. Store the user manual in a safe place for future reference.

SAFETY INSTRUCTIONS

- Before inserting the mains plug into the socket, check that the mains supply voltage and current rating corresponds with the power supply details shown on the model label of the appliance.
- This unit has three brewing modes; please use the filter, separator and the mugs in the right ways based on the instructions mentioned when choosing between the different modes.
- Prior to initial use, clean it by going through the whole cycle. Fill water to the maximum level, then turn on the unit and the water will come out. Once finished, pour away all the water and the unit is ready to use.
- The product should only be placed on horizontal flat surfaces, please do not place the product on inclined or unstable surfaces in order to prevent any injuries.
- During usage, always keep the unit away from the reach of children in order to avoid injury as the coffee maker operates at high temperatures.
- This product should only be used to make coffee with water. Please do not insert any other liquid such as milk.
- Do not insert the mains plug into the socket if the unit has no water.
- When using the appliance, always pay attention to the water level marking on the interior of the coffee maker. Do not operate the unit below the minimum level and never exceed the maximum level.
- It is advised to decalcify the unit at least once a month. Any regular de-scaling agent may be used, provided that the relevant instructions are observed. Turn on the appliance to clean up the scale and run the maximum quantity of water through the machine twice without adding coffee.
- You must put the separator into the filter when you make two cups at the same time in order to keep the same proportions for each cup.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Do not attempt to remove any parts of the housing nor insert any metal objects into the interior of the appliance.
- To prevent damage to the power cord, always keep it away from sharp edges or corners.
- Do not place the power cord over or near hot surfaces.
- If the supply cord is damaged, contact Sytech Service Centre.
- DO NOT operate the appliance if:
    - The appliance or the power cord are damaged
    - The appliance has been dropped.
- Always remove the plug from the wall socket:
    - After use
    - In case of any malfunction
    - Before cleaning

DESCRIPTION

1) Lid
2) Water tank
3) MAX water marking
4) MIN water marking
5) Water Spout
6) Filter
7) Separator (Optional)
8) Ceramic cups
9) Switch
10) Cup mat
11) Power cord

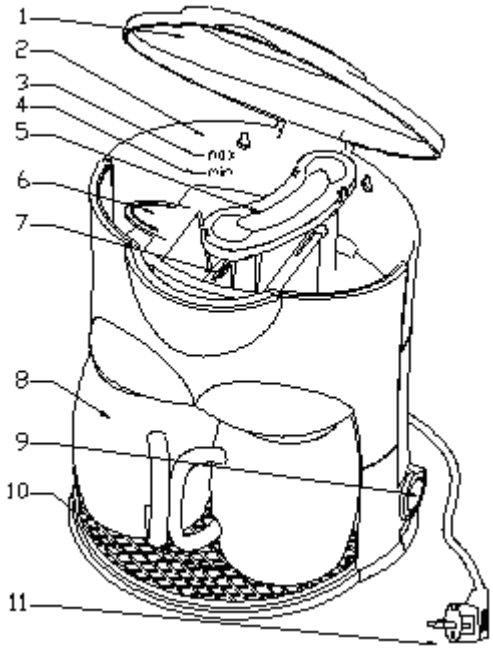

FUNCTIONAL DESCRIPTION

- The product has three brewing modes:
  1) General mode for two cups.
  2) Adjustable strength mode for two cups.
  3) Fast brewing mode for one cup.
- **General mode for Coffee or Tea:** Add the necessary amount of ground coffee or Tea in each compartment. Fill up the water container with the required quantity of water, close the lid and place the mugs into position. Lastly, turn on the switch for the unit to start functioning.
- **Adjustable strength mode for coffee or tea:** Insert the separator into the filter, and add the desired amount of ground coffee or tea in each compartment. Fill up the water container with the required quantity of water, close the lid and place the mugs into position. Lastly, turn on the switch for the unit to start functioning.
- **Fast brewing mode for coffee or tea:** Take out the separator and add the necessary amount of ground coffee or tea, and fill up the water container with no more than one cup of water (MIN water marking). Close the lid and place the mugs into position. Lastly, turn on the switch for the unit to start functioning.
- Turn off the unit after the machine has stopped dripping. Wait for 1 minute and then take out the filter basket to clean.
- Temperature Control device: When the appliance is turned on without water OR once the water has finished in the container during brewing process, the temperature will increase and the temperature control device will cut off the power automatically preventing the unit from burning.
- Thermo fuse device: This unit is equipped with a secondary temperature protection. In case the temperature control device fails, the thermo fuse device will cut off the power. At this point unplug the appliance at once.

ENVIRONMENTAL DISPOSAL

You can help protect the environment!
Please remember to respect the local regulations: hand-in the
non-working electrical equipments to an appropriate waste disposal centre

TECHNICAL SPECIFICATIONS

Capacity: 300 ml (2 cups)
Power Source: 220-240V. 50 Hz
Power: 420-500W
Dimensions: 18 x 16 x 20 cm.
Net Weight: 1.10 Kg.

Cafetera de Goteo

Manual de Usuario

SY-DC02

BIENVENIDO

Enhorabuena por la compra de su cafetera de goteo SY-DC02. Para sacar el mayor partido a la cafetera, es recomendable que lea atentamente este manual de usuario y que lo conserve en un lugar seguro para futuras consultas.

PRECAUCIONES DE SEGURIDAD

- Antes de conectar la unidad a la toma de corriente, compruebe que el voltaje de la unidad se corresponde con el voltaje de su hogar.
- Esta unidad tiene tres modos de funcionamiento. Asegúrese de que usa los filtros, las tazas y el resto de las partes de la unidad de forma correcta.
- Antes del primer uso, deberá limpiar el aparato. Llene el deposito hasta el nivel máximo, enciende el aparato y deje que salga todo el agua. una vez acabado este proceso, la cafetera estará lista para utilizar.
- El producto debe colocarse sobre una superficie horizontal, plana y estable. No coloque la unidad sobra una superficie inclinada o inestable para evitar peligros.
- Durante el uso de la unidad, el producto debe colocarse en una zona que no sea fácilmente accesible por los niños para evitar daños provocados por el vertido de agua caliente.
- En el depósito de la unidad solo se puede añadir agua; no añada cualquier otro tipo de líquido como leche.
- Para evitar cualquier peligro, no conecte la unidad a la toma de corriente si no hay agua en el depósito.
- Llene el depósito de la unidad atendiendo a los límites MAX y MIN indicados.
- Es aconsejable descalcificar la cafetera una vez al mes. Añada decalcificador y llene el depósito con agua; deje reposar durante 5 minutos. Encienda la unidad para limpiar. Encienda y apague la unidad si lo cree necesario, para limpiar con más intensidad. Use la unidad dos veces con el depósito lleno de agua (no use café) para eliminar las partículas restantes.
- Recuerde que debe poner el separador del filtro cuando haga dos tazas de café para mantener la misma proporción de café en las dos tazas.
- Este aparato no está diseñado para ser utilizado por personas (incluyendo niños) con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimiento, a no ser que sean supervisados o que una persona responsable les haya enseñado el uso del aparato por su seguridad.
- No intente quitar ninguna parte de la carcasa ni introduzca objetos metálicos en el interior del aparato.
- Para evitar dañar el cable, manténgalo siempre alejado de bordes o esquinas afiladas.
- No coloque el cable sobre o cerca de una superficie caliente.
- Si el cable de alimentación está dañado, contacte con el Centro de Reparaciones de Sytech.
- NO utilice el aparato si:
    - El aparato o el cable está dañado.
    - El aparato se ha caído.
- Desconecte siempre el enchufe de la toma de corriente:
    - Tras su uso
    - En caso de mal funcionamiento
    - Antes de limpiarlo

PARTES DE LA UNIDAD

1. Tapa del depósito
2. Depósito de agua
3. Cantidad máxima de agua
4. Cantidad mínima de agua
5. Suministrador de agua
6. Filtro
7. Separador del filtro
8. Tazas de cerámica
9. Interruptor encendido/apagado
10. Superficie para las tazas
11. Cable

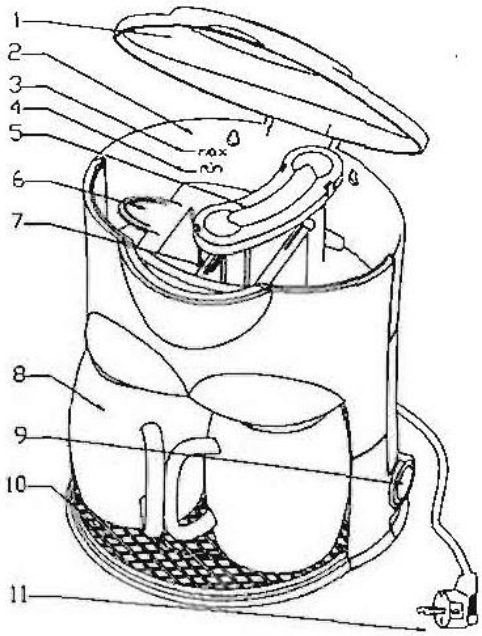

DESCRIPCIÓN FUNCIONAL

- La unidad dispone de tres procesos:
    1. Modo general para dos tazas
    2. intensidad ajustable para dos tazas
    3. preparación rápida de te o café para una taza.

- Modo general para dos tazas. Extraiga el separador del filtro; añada la cantidad de café molido o de café necesario. Llene el depósito con agua, con la cantidad necesaria. Cierre la tapa y coloque las tazas en la posición correcta. Encienda la unidad para ponerlo en funcionamiento.
- Intensidad ajustable para dos tazas. Coloque el separador del filtro en el interior del filtro de la unidad; añada la cantidad de café molido o de té necesario (recuerde de graduar al gusto la cantidad de café y de té en cada lado del filtro). Llene el depósito con agua, con la cantidad necesaria. Cierre la tapa y coloque las tazas en la posición correcta. Encienda la unidad para ponerlo en funcionamiento.
- Preparación rápida de té o café para una taza. Extraiga el separador del filtro; añada la cantidad de café molido o de té necesario. Añada solo una taza de agua; justo por encima del valor MIN. Cierre la tapa y coloque la taza en la posición correcta. Encienda la unidad para ponerlo en funcionamiento.
- Apague la unidad cuando haya parado de gotear. Espere 1 minuto antes de extraer las tazas y el filtro. Atención: el contenido estará muy caliente.
- Dispositivo de control de la temperatura: Cuando la unidad esté encendida, sin agua o al final del proceso del café, la temperatura aumentará y el dispositivo de control de la temperatura detendrá el suministro de electricidad de forma automática.
- Dispositivo termo-fusible: La unidad tiene un segundo dispositivo de protección de la temperatura. En caso que el dispositivo de control de la temperatura no funcione de forma correcta, el dispositivo termo-fusible detendrá la alimentación de corriente. Cuando se haya cortado el suministro, desenchufe la unidad de la toma de corriente inmediatamente.

MEDIO AMBIENTE

¡Puede ayudar a proteger el medio ambiente!
Recuerde respetar la normativa local: Lleve los equipos eléctricos que no funcionen a un centro de recogida de residuos apropiado.

ESPECIFICACIONES TECNICAS

Capacidad: 300 ml (2 tazas)
Alimentación: 220-240V 50 Hz
Potencia: 420-500W
Dimensiones: 18 x 16 x 20 cm.
Peso: 1.10 Kg.